Alpha Appliances Limited
15th Floor Dominion Centre 43-59 Queen's Rd East.HK
Website:http://www.alpha-general.com

cinetron

Tumble Dryer
User manual

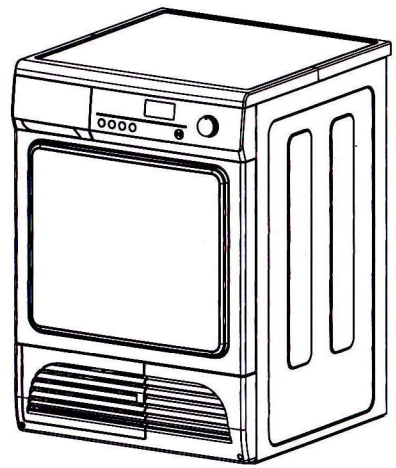

Applicable Models

CD-8C

Thank you for choosing Cinetron Tumble dryer.
Please read this User Manual carefully prior to using,
and keep it for further reference.

PREFACE

Thank you for choosing our dryers.Please read this manual carefully. It provides instruction, use, and maintenance. Retain it for future reference. Record the model and serial numbers of your machine. Quote this information to Alpha Appliances Limited at 29931733 if you require service.

The following symbols are used in this manual:

Important information concerning your personal safety and information on how to avoid damaging the appliance

General information and tips

Environmental information

Contents

Safety information.....1
Product description 5
Control panel.....6
Use 7
Drying hints.....12
Drying programme.....14
Care and cleaning.....15
Something not working.....18
Technical data 19
Installation.....20
Environment concerns..... 22
Guarantee/Customer Service..... 23
Electric diagram.....24

Safety Information

Before Use

WARNING

Read and understand thoroughly this safety instructions before use. The items Indicated here are very important safety precautions, which must be followed. Any failure and losses caused by ignoring the above mentioned items and cautions mentioned in the operation and installation instruction are not covered by our warranty and any liability.

The appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction. Children should be supervised not to play with the appliance.

Possible electric shocks

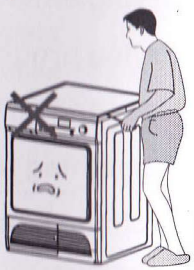

- Disassembly, reparation or modification cannot be carried out by people other than professional maintenance staffs.
- The household electrical supply system (the current, the voltage, the cable) such as a fuse with suitable specifications should be provided.should meet requirements of the dryer under normal load, and safety devices.
- The power plug must be connected to a three-core socket with an earth wire and is grounded properly and reliably.
- If the supply cord is damaged, it must be replaced by the manufacturer,its service agent or similarly qualified persons in order to avoid a hazard.
- Do not disconnect the power plug by pulling the supply cord. Hold the power plug with your hand.
- Do not use the supply cord when connection of the power plug and the supply cord is loose.
- Do not touch the power plug with wet hands. Wipe dust or water drops over the power plug off with dry cloth.
- Do not over-bend the supply cord or put it under heavy weight.
- Do not use the supply cord / socket / power plug if it is damaged or broken.

Possible Explosions

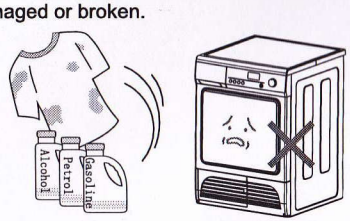

- Do not put combustible liquid such as gasoline, petrol and alcohol into the appliance or nearby. Don't put clothes with that liquid into the appliance.
- Do not connect / disconnect the power plug when leakage of gas or other combustible gas occurs.

Safety Information

Before Use

Fire accidents / short circuit or electric leakage may occur

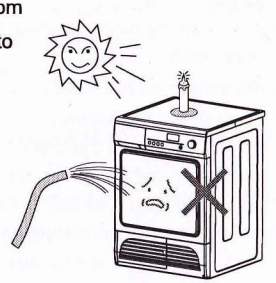

- Do not install the appliance close to fire sources or heat sources.
- Do not rest any burning candles or cigarettes on the appliance.
- Do not install the appliance in places with dampness or suffering from rainfalls, lest igniting damages or other accidents occur easily due to gathered water drops on electrical components.
- Do not install the dryer in places under direct sunshine, lest the plastic components and rubber components become aged.
- Do not use water shooting at the appliance when cleaning it.
- In order to avoid danger of fires caused by excessive drying, do not use the appliance to dry the following items: Cushions, quilts and the like (these items accumulate heat).
- Items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in the tumble dryer.
- If you have washed your laundry with stain remover, you must execute an extra rinse cycle before loading your tumble dryer.
- Please make sure that no gas lighters or matches have accidentally been left in pockets of garments to be loaded into appliance

Warning | **Never stop a tumble dry before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.**

Personal injury may occur

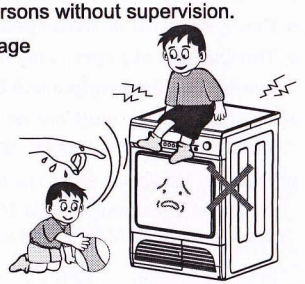

- This machine is not intended for use by young children or infirm persons without supervision.
- The package materials may be dangerous to children. Put all package materials (e.g. the plastic bag) to places unreachable to children.
- Do not touch laundries in the drying drum till the dryer stops working completely.
- Do not keep children or pets nearby when the dryer is working, for they may be trapped into the dryer. Please check carefully the drum before closing the door.

Safety Information

⚠ Other instructions

- This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed.
- Only wash fabrics which are designed to be machine dried. Follow the instructions on each garment label.
- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.
- If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely under the appliance.
- Do not climb onto the dryer or rest heavy objects / heating devices or items with water or liquid leakage on the dryer, lest deformation of the face panel and the plastic component occur.
- Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine.
- After having installed the appliance, check that it is not pressing or standing on its electrical supply cable, or vent hose.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Always unplug the appliance after use, clean and maintenance.
- Do not overload the appliance. See the relevant section in the user manual.
- Clothes which are dripping wet should not be placed in the dryer.
- Garments which have been in contact with volatile petroleum products should not be machine dried. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine.
- Never use the tumble dryer if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the tumble dryer is accessible.
- The tumble dryer is not to be used if industrial chemicals have been used for cleaning.
- The lint must not to be allowed to accumulate around the tumble dryer.
- Do not dry unwashed items in the tumble dryer.
- Fabric softeners or similar products should be used as specified by the fabric softener instructions.
- The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.
- That exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.
- That the appliance must not be installed behind a lockable door, a sliding door or a doorwith a hinge on the opposite side to hat of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.

Safety Information

Before Use

- The lint trap has to be cleaned frequently
- Adequate ventilation has to be provided to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Remove all objects from pockets such as lighters and matches.
- Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, tacking or storing oil affected items can prevent heat from escaping and so create a fire hazard.
- If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent - this will reduce, but not eliminate, the hazard.

Product description

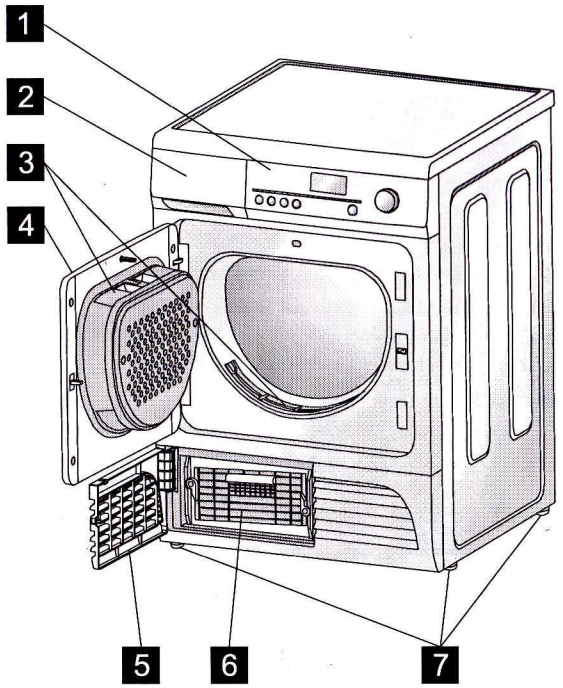

1. Control Panel 2. Drainage container 3. Fluff filter 4. Door
5. Condenser cover 6. Condenser 7. Adjustment leg

Control panel

Control panel

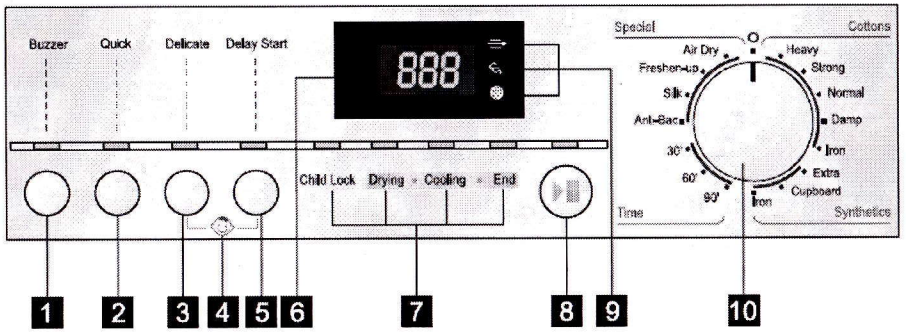

1. Buzzer
2. Quick
3. Delicate
4. Delay Start
5. Child Lock
6. LED Display
7. Indicator Lights
   Child Lock
   Drying
   Cooling
   End
8. Start / Pause
9. Indicator lights
   Condenser unit
   Drainage container
   Fluff filter
10. Program selector dial

First Use

- Ensure that the electrical connections comply with the installation instructions.
- Remove the polystryrene block and any material from the drum.
- Before using your tumble dryer for the first time, we recommend that you place a few damp cloths inside the appliance and dry for 30 minutes. There may be dust inside a brand new tumble dryer.

Daily Use

Connect the appliance

- Open the door (see picture).
- Place the laundry in the drum, one item at a time, shaking them out as much as possible.
- Close the door. Please check the laundry does not get caught between the door and filter.

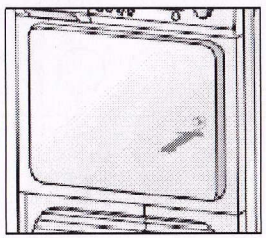

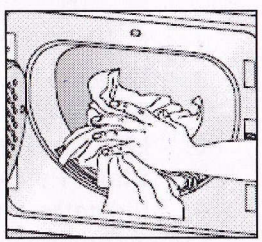

Select the required programme

- Turn the programme selector dial to the required programme. The Start/Pause light starts to flash. The programme will be switched off if you have not pressed any button for 10 minutes.

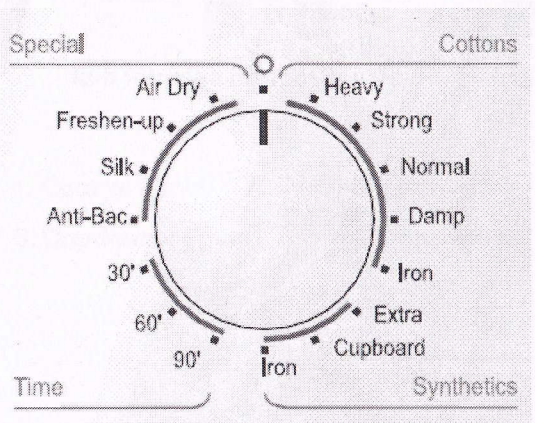

The selector dial is divided into following sections:

- Cottons
- Synthetics
- Time
- Special

Automatic controlled drying

- You can choose different programme base on your different clothes materials. The device hasthe function with sensor the moisture in order to automatically adjust the drying time for optimaldrying. This drying system is fitting for cottons, synthetics sections and Anti-Bacterial, silk programme.

Time controlled drying

- Can be used to finish off drying if necessary. Select the 90 or 60 minute programme for cottons or the 30 minute programme for synthetics. To cancel a programme which is running, turn the programme selector dial to "O". At the end of drying, turn the selector dial to "O" to switch the machine off before removing the laundry.

Programme Option buttons

- Depending on the programme, different functions can be combined. These must be selected after choosing the desired programme and before depressing the Start/Pause button. When these buttons are pressed, the corresponding pilot lights come on. When they are pressed again, the pilot lights go out.



Select the Buzzer

After turning on the appliance, the buzzer is off if you do none operation. The buzzer can be turned on or be turned off during the process. By pressing "Buzzer" button, the buzzer goes off and the corresponding pilot light comes on. When the buzzer is on , the signal will sound in the following cases:

- **When depressing any button.**
- **At the end of the programme.**

When the buzzer is on, if you press the "buzzer" button once more, the buzzer will be switched off.



Select the Quick button

The option can be selected in the following programme: "Heavy", "Strong", "Normal".By depressing this button the drying time will be reduced by 10 minutes. The corresponding light illuminates.this option cannot be selected together with "Delicate Option".

Select Delicate

The option can be selected in the following sections: "Cottons", "Synthetics", "Time". Pressing this button allows drying to be performed at a lower temperature, for delicate items. The corresponding pilot light comes on. This option can also be used for time controlled drying. This function cannot be used with QUICK DRYING.

Select Delay start

This button allows you to delay the starting of the programme by 24 hours max. This option must be selected after having selected the programme and before pressing Start/Pause to start the programme. Every time the button is pressed, the time is increased by 1 hour.

"Delay cancelled → 1→ 2→ 3· · · · · →24"

It can be selected in both cases before and after selecting option programme (Buzzer,Quick,Delicate). The countdown begins after you have pressed the Start/Pause button and the corresponding light illuminates. The display shows the remaining time .The remaining time is displayed hour by hour. This option can not be selected when special programme was selected.

Display

The display shows the following information:
After you have selected the programme, its duration (in hours and minutes) appears on the display. It is calculated automatically on the basis of the maximum load accepted for each type of fabric and of the required degree of drying. When the programme starts, the remaining time is displayed every 1 minutes.

● Delayed Start

If you have selected a delay time by means of the relevant button, the display shows it. The count-down is displayed hour by hour. Once you press the "Start/Pause" button,the appliance will start the delayed process. If you want to check the selected programme, press the "Start/Pause" button again. It shows the duration of the previously selected programme.This function cannot be used with "Special" programme.

- **Incorrect option selection**

If you select an option that is not compatible with the programme you have selected, the display shows ErS (error).

If you select other programme becasuse of incorrect operation while the programme is running,the display shows Ers(error).

- **Indicator lights**
  - light
    It comes on after each load, which remind you to clean the condenser. It is recommended to clean the condenser three or four times per year.
  - light
    It comes on when the water container is full, which remind you to empty the water container.
    Note! Empty the water container after each load to avoid the alarm when use in next time.
  - light
    It comes one after each load to remind you to clean the filter. If not clean the filter, the machine perform well for the next use, but the drying efficiency will be influenced if not clean the filter for many times.

Select the Start/Pause

Press this button to start the dryer after having selected the programme and the options. If the door of the appliance is opened while the programme is running, this button must be pressed again after closing the door in order to restart the programme from the point at which it was interrupted. In this cases the light of the Start/Pause button flashes to remind you that the start button needs to be pressed again.

Indicator lights

These lights indicate the following functions:

- "Child Lock" light
  This light indicated the appliance is locked.
- "Drying" Light
  This light indicated the appliance is in the drying phase.
- "Cooling" Light
  This light indicates that the appliance is in the cooling phase. At the end of drying, there is a10 minutes cooling phase to cool the laundry.
- "End" Light
  This light is on during the anti-creasing phase after the cooling phase.

Use

At the end of the programme

All drying programs end with 10 minutes cooling phase. If the laundry is not removed at the end of the cycle, the dryer performs an anti-creasing phase (duration: 30 minutes maximum). If you do not remove the laundry, the machine will stop automatically at the end of the anti-creasing phase. The display shows "End" and the buzzer sounds for 15 seconds if you have selected the buzzer. Turn the program selector dial to "O", all the lights go off.

"Child Lock" functions

When the machine is on, press meantime "Delicate" and "Delay Start" button for several seconds, the system will lock all the buttons. Then, all buttons are invalid.If you want to make the appliance to return to the normal state, then press "Delicate" and "Delay Start" button for several seconds meantime again.



After each use

Clean the filter.

Important!

If the drying programme has to be stopped before it reaches the end, we recommend that you turn the programme selector dial to position "Air Dry" and wait until the end of this cooling phase before removing the laundry. This will avoid a build-up of heat inside the appliance .To do this first turn the dial to "O" and then to "Air Dry" and depress the "Start" button.

Modifying the programme

To change a programme which is running, first cancel it by turning the programme selector dial to "O". Select the new programme and press the Start button .

Drying Hints

Drying Hints

Before loading the laundry

Never tumble dry the following: Particularly delicate items such as net curtains, woollen, silk, fabrics with metal trim, nylon tights, bulky materials such as anoraks, blankets, eiderdowns, sleeping bags, feather quilts and any items containing rubber foam or materials similar to rubber foam.

- Always follow the instructions on garment labels:

may be tumble dried

normal drying (high temperature)

delicate drying (low temperature)

do not tumble dry

- Close pillowcases and covers with fasteners to prevent small laundry items getting tangled inside them. Close press studs, zips and hooks and tie belts and apron strings. Sort laundry according to type and degree of drying required.
- Do not over-dry laundry, this avoids creasing and saves energy.
- Avoid drying dark clothes with light coloured fluffy items such as towels as they could attract the fluff.
- The laundry must be thoroughly spun before tumble drying.
- Easy-care items, too, e.g. shirts, should be briefly pre-spun before drying.
- Knitted textiles (knitted underwear) may shrink a little during drying. Please do not overdry items of this type. It is advisable to allow for shrinkage when choosing the size of new purchases.
- You can also put starched items into your dryer. However, to achieve the desired starched effect, choose the programme "Iron dry". To remove any starch residues, wipe out the internal drum after drying with a moist cloth and then rub it dry.
- To avoid a static charge when drying is completed, use either a fabric softener when you are washing the laundry or a fabric conditioner specifically for tumble dryers.
- Remove the laundry when the dryer has finished drying.
- If individual items are still damp after drying, set a brief post-drying time, but at least 30 minutes. This will be necessary particularly for multilayered items (e.g. collars, pockets, etc.).

Drying Hints

Make sure that no metal objects are left in the laundry (e.g. hair clips, safety pins, pins)

Button up pillowcases, close zip fasteners, hooks and poppers. Tie any belts or long tapes.
To avoid laundry becoming tangled:
Close zips,button up duvet covers and tie loose ties or ribbons(e.g.of aprons).
Turn items with double-layered fabrics inside out(e.g.with cottonlined anoraks,the cotton layer should be outermost).These fabrics will then dry better.

Maximum loads

Recommended loads are indicated in the programme charts:
General rules:

- **Cotton,linen:** recommended loads are not too tightly packed;
- **Synthetics:** drum no more than half full;
- **Delicate fabrics and woollens:** drum no more than quarter full.

Kind Notice: Try to load the maximum capacity of the machine as small loads are uneconomical. For easy-wrinkle clothes, slightly reduce the laundry.

Laundry weights

The following weights are indicative:

Bathrobe	1600g	night dress	265g
napkin	130g	ladies' briefs	130g
quilt cover	930g	men's work shirt	800g
sheet	665g	men's shirt	265g
pillow case	266g	men's pyjamas	130g
tablecloth	330g	blouse	665g
towelling towel	265g	men's underpants	130g
tea cloth	130g		

Drying programmes

Drying programmes

Section	Course	Max load	Description of programme
Cottons	Heavy	8kg	Jeans,work clothes and so on.
	Strong	8kg	Jeans,work clothes and so on.
	Normal	8kg	Drying shirt, T-shirt, cotton trousers
	Damp	8kg	Drying knitted items, cotton shirt.
	Iron	8kg	Drying sheet, bed linen,table linen, starched laundary
Synthetics	Extra	4kg	For sheet, tablecloth, synthetics items.
	Cupboard	4kg	For synthetics items
	Iron	4kg	For knitted items, shirt
Time	30', 60', 90'	8kg	Multi-layered fabrics, bath towels, tea towels.
Specials	Anti-Bacterial	4kg	For men's underpants, pantywaist, winter clothing
	Silk	2kg	For silk items
	Freshen-up	4kg	For men's underpants, shirt .
	Air Dry	8kg	For men's underpants, shirt, T-shirt, cotton trousers, etc.

Kind Notice:for drying bathrobe and toweling towel,the max load don't exceed 6kg.

Care and cleaning

You must DISCONNECT the appliance from the electricity supply, before you can carry out any cleaning or maintenance work.

External cleaning

Use only soap and water and then dry thoroughly .Important:do not use methylated spirit,diluents or similar products.

Cleaning the door

Clean periodically the interior part of the door to remove any fluff . Accurate cleaning ensures correct drying.

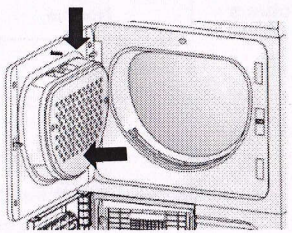

Cleaning the filter

- Your dryer will only function well if the filter is cleaned.
- The filter collects all the fluff which accumulates during drying ,for your unit to operate at optimum efficiency.
- "Filter" indicator lights remind you ,they must therefore be cleaned .
- The filter must be removed for cleaning
- When drying ,all the fibre clothing are unhairing , dryer through the filter collects all the fluff .
- When this phenomenon happened, please use the brush and Dipped warm water to clean filter。Open the door, remove filter。 (See picture)

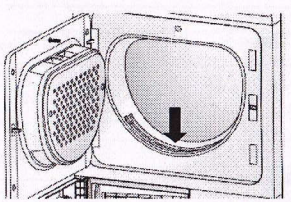

Warning | **Do not use the appliance without filter.**

Water receiver emptied

Water receiver collects all of the water from condenser.Water receiver need to emptied every time after used. Otherwise will be caused reduce drying performance. If water fulled of water receiver, the light of"emptying the remaining water" in the process of dryer running, and buzzer sounds. Under this situation, water receiver must be emptied water within one hour.

1.Pull out water receiver

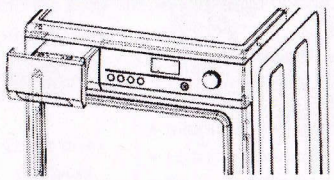

2.Tip water into pool

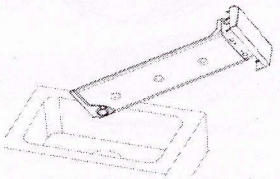

3.Push the water receiver in dryer

4. press the Start/Pause button

Cleaning the condenser

Condenser is one of the very important assembly to realize effective drying, Therefore need special attention.Suggest you clean the condenser three or four times in every year .

1.Open condenser cover

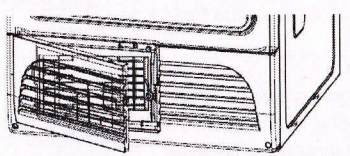

2.Move two pieces of lock rod, pull out the condenser

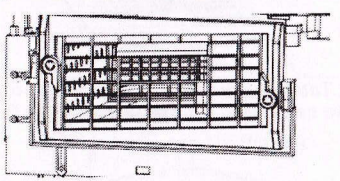

3. Put the condenser under the tap make water through completely by clean condenser .

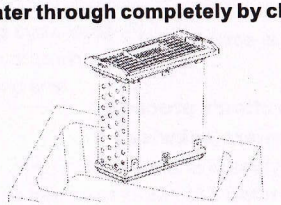

4.According to installation of opposite direction

Care and cleaning

Temperature sensor

In the movement process,this device is used for induction clothing humidity, it means that it must be carried on cleaning. Major cause of clean is must scour out the calcium oxide boiler which on the sensor surface up. Clean the sensor in the tumbler(See picture)

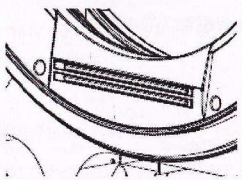

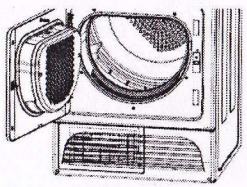

Lamp replace

1.Open the door, put your hand into the drum of a clothes dryer, use screw driver unscrew two pieces of screw, and take out lamp screen.

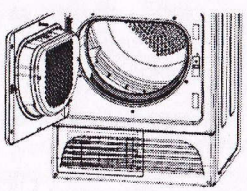

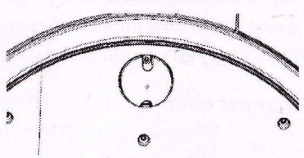

2.Take out the bulb by turning counterclockwise. Be carefully, do not let the bulb fall off.

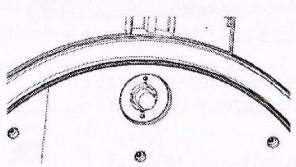

3.According to installs new bulb with its reverse direction's process.
4.Catch the lamp screen by hand ,and hard push counterclockwise, until the bulb has loosened.

Something not working

Something not working

- Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting our Service Centre, please carry out the checks listed below.
- During machine operation it is possible that the pilot light flashes to indicate that the machine is not working. Once the problem has been eliminated, press the Start/Pause button to restart the programme. If after all checks, the problem persists, please contact our customer service centre at 29931733

Malfunction	Possible cause	Solution
Dryer does not work	• Mains plug is not plugged in. • Loading door is open. • Have you pressed the ▷‖ Button?	• Plug in at mains socket. • Close loading door. • Press the ▷‖ button again.
Drying results unsatisfactory	• Wrong programme selected. • Filter clogged. • Incorrect volume of laundry. • The sediment on humidity sensor	• Select a different programme the next time you dry(see "Drying programmes"section). • Clean lint filter. • Observe recommended loading volumes. • Washed humidity sensor surface
Drum light does not work	• Light bulb is defective.	• Replace light bulb.
Drying cycle ends shortly after programme starts. "End" light illuminated.	• Not enough washing loaded or washing loaded is too dry for selected programme.	• Select higher drying level (e.g. Heavy instead of Strong).
Drying cycle lasts an unusually long time.	• Load volume is too big.	• Reduce load volume.

If you are unable to identify or solve the problem,please contact our customer Service centre at 29931733 Before telephoning,make a note of the model,serial number and purchase date of your machine:the customer Service Centre will require this information.

Technical data

Appendix

IMPORTANT:

If you call out an engineer to a fault listed below, or to repair a fault caused by incorrect use or installation, a charge will be made even if the appliance is under guarantee.

Technical data

Dryer Model	CD-8C
Dryer Capacity(kg)	8.0
(AC V/Hz)	220-230V/50Hz
Heater power (W)	2500
Net Weight(kg)	40.5
Dimensions(W*D*H)(mm)	595X630X850

⚠ It is dangerous to alter the specifications or attempt to modify this product in any way.

⚠ Care must be taken to ensure that the appliance does not stand on the electrical supply cable.

⚠ Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.

⚠ **IMPORTANT: The appliance must not bulit-in.**

- **Unpacking**
  All packing must be removed before using the appliance.
- **Check accessory**
  Open the accessory bag and check the accessories.

Accessory	Name	Quantity
	drainpipe	1
	manual	1

⚠ Should the appliance be moved, it must be transported vertically.

Installation

Appendix

Earth note:

This appliance must be earthed. In case of failure or damage, earth can provide a minimum resistance to reduce the possibility of electric shock.The power cord has grounding wire with device and power cord with plug. Plug must be inserted into a properly installed and grounded socket (in accordance with all local rules and standards).

Procedure:

A separate earth is required by some local rules. In that case, you need buy grounding wire, clips and screws.

Water discharge

It' s not necessary to discharge the condensed water to the tank, it can be drained out directly.

change drainpipe

Pull out the water pipe by means of the arrow direction ,Then install the drainpipe.
Such as the pilers can be used if it is difficult to do.

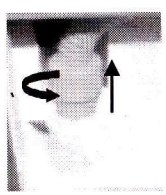

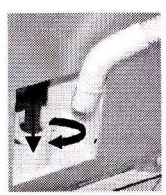

Level adjustment

1. Adjust the level to avoid vibration and noise.
   Machine must be placed in a clean place, no water ,ice and combustible materials there.
   To keep vibration and noise to a minimum when the dryer is in use, it should be placed on a firm, level surface.
2. If the tumble dryer is not completely leveled, need to adjust the front feet up:to lower the dryer by turning anti-clockwise and to ascend it by turning clockwise till the appliance will not shake.

Guarantee/Customer Service

Appendix

Standard guarantee conditions

We undertake that if within 12 months of the date of the purchase this appliance , we will provide one year warranty on condition on that:

The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.

The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions.

The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.

This guarantee is in addition to your statutory and other legal rights.

This guarantee does not cover

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements.
- Products of our manufacture which are not marketed by us.

Marking explanation

V	Volt	~	Alternating current		
W	Watt	Hz	Hertz		
SGS GS	Tested safety	CE	CE marking		risk of fire

Electric diagram

Appendix

Electric diagram

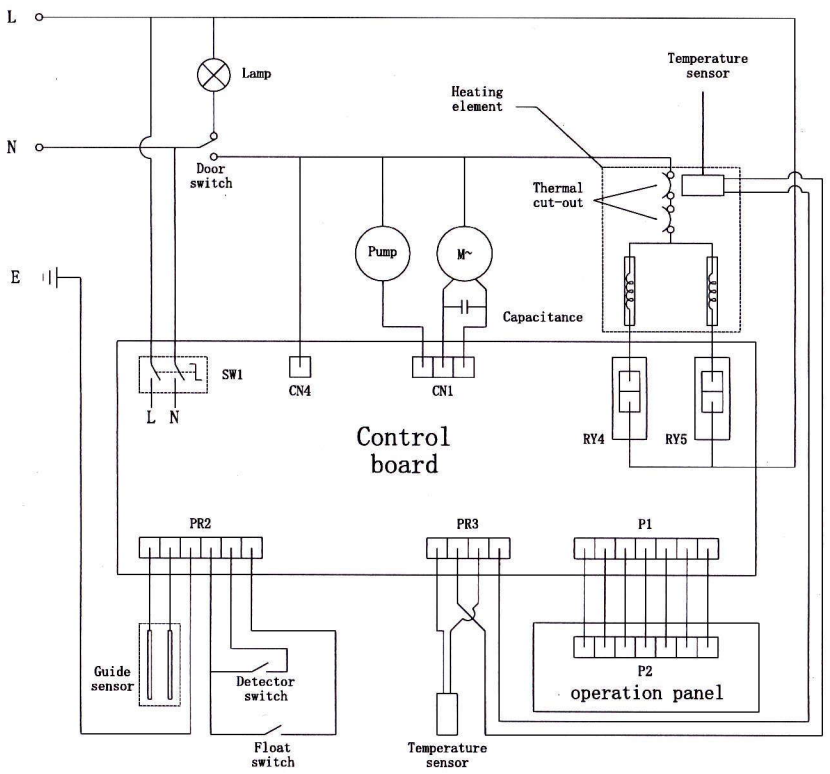

新朗

乾衣機
安裝使用說明
適用產品型號：CD-8C

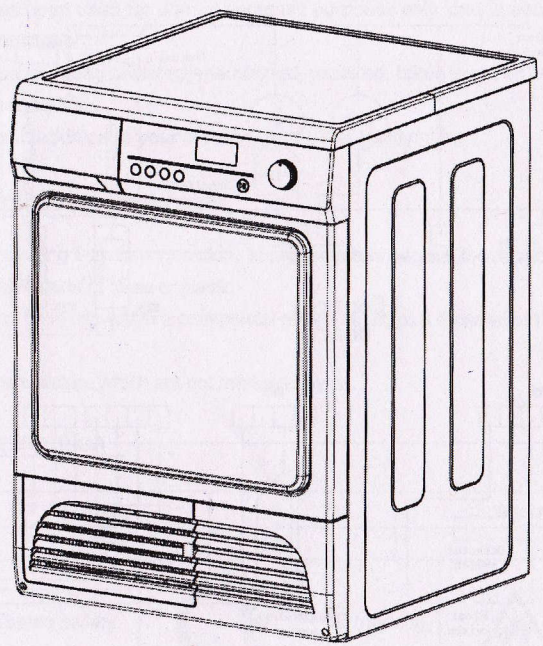

感謝您購買和使用新朗乾衣機
使用前請仔細閱讀本安裝使用說明書，並妥善保存。

序言

歡迎選購新朗乾衣機。本產品安裝使用說明書中包括有安全注意事項、安裝說明。‘使用說明、清潔與保養等重要信息，請妥善保管本說明及詳細閱讀，以便能夠正確使用、保養乾衣機，延長使用壽命。

本冊中使用到了一下圖標：

關於人身安全的重要信息和避免損害
本電器的重要信息

信息剛要和提示

環保提示

目錄

安全須知……1

產品介紹……3

控制面板……4

使用……5-8

乾衣指南……9-10

乾衣程序……11

保養和清潔……12-14

常見故障……15

技術參數和安裝……16

安裝……17-18

環保……19

保修和客戶服務……20

安全須知

請注意以下安全事項

為確保正確安全使用這乾衣機，在安裝和首次使用本機前請仔細閱讀此手冊。為了避免不必要的錯誤操作和事故，每個用戶都應當完全熟悉本機操作和其安全性能。請保存好這份手冊，並在搬動或轉賣的時候隨機附上本手冊，以使每個使用者都能正確安全使用本機。

有可能觸電

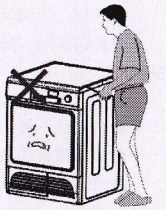

●任何試圖修改本說明書或更改產品的行為都是非常危險的

●除非有懂安全須知的人員在旁監督和指示，否則其他（包括小孩）不熟悉操作或缺少知識和經驗的人不能單獨操作本機；

●請防止您的寵物鉆入滾筒內，為避免此種現象，請使用前檢查滾筒；

●所有堅硬的東西如硬幣，別針，石頭或其它鋒利的東西會對本機造成損害，請勿將這些物品放入本機內；

●爲了避免因過度乾衣而起火，下列物品請不要使用本機烘乾：床墊、棉被及類似的物品（這些物件能聚熱）

●下列物品如泡沫橡膠，浴帽、防水服或膠制衣物以及嵌有橡膠泡沫墊的枕頭，不能放入乾衣機滾筒內進行烘乾；

●使用本機後，在進行清潔和維護前，一定要拔掉電源；

●在任何情況下您都不能私自修理本機，以免造成損害和嚴重故障，如需要修理，請聯絡第一電業有限公司維修服務中心。

有可能發生爆炸

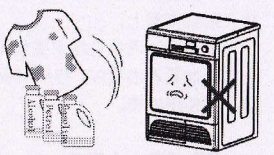

●混有丙酮油，汽油，煤油，去汙劑，松節油，蠟或除蠟劑等的衣物都應在熱水中添加清潔劑過後才能放入乾衣機；

●爆炸危險物品：含有易燃物質（如汽油，酒精，乾燥劑等）的衣物不能放入滾筒內，因為這些物質能引起爆炸，只有經過水洗後的物件方能滾動乾衣。

有可能發生火災，短路，漏電

●染有食用或植物油的衣物不能放入滾筒乾衣機

●如果你用除鏽劑洗滌過衣物，那麼在本機乾衣前必須進行額外的漂洗程序。

●確保不要把如火柴，打火機之類的東西遺忘在衣服口袋裡而帶入乾衣機內。

警告 請不要在乾衣過程中關閉本機，除非所洗滌衣物能很快從機內取出，使熱量散去，防止火災。

安裝

●本機 ，移動時請格外小心；

●拆包裝時，檢查機器有無損壞，如果有疑問，請不要使用並及時聯絡第一電業維修服務中心；

●本機的電路安裝工作必須由合格的電工或專業電氣人員完成；

●請務必不要把機器放置在供電電線上

●如果機器放置在毛毯地板上，要調整機腳使機器底部空氣流通；

●安裝完乾衣機後，要檢查機器確保其沒有壓住電線或通風管。

使用

●此機轉為家庭用戶設計，除非此機已被專門設計，否則不允許用於別處。

●本機只適用於那些可以用機器來烘乾的衣物，請查看每件衣物上的商標說明；

●沒有洗滌過的衣物請勿用乾衣機烘乾；

●不要超量使用，參見用戶手冊上的相關部份

●還在滴水的衣物不要放入乾衣機；

●接觸過易揮發性石油產品的衣物不能用於本機烘乾。如果使用揮發性清潔液，一定要防止沾到衣服上。

●不要通過拉電線來從插座里拔出插頭，任何時候都應拔插頭本身；

●如果本機電線，控制面板或者底部受損，致使本機內部的原件容易被觸摸到時，那麼請不要使用本機。

小孩安全事項

●如果沒有成人監督，幼童或體力弱的人不能使用本機；

●需監護的兒童不能隨便玩耍本機；包裝器件（如聚苯乙烯, 塑料膜）有使兒童窒息的危險。請勿讓您的孩子接觸這些物品；

●清潔劑應放在小孩接觸不到的地方；

●要防止小孩或寵物爬入滾筒內。

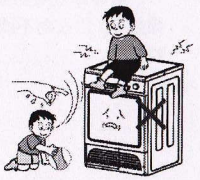

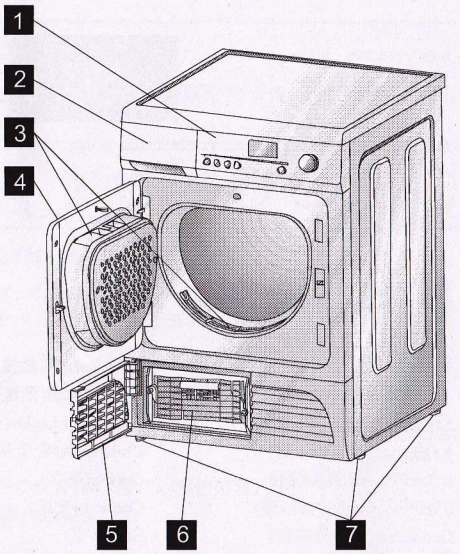

- 1 面板控制
- 2 儲水器
- 3 過濾網
- 4 門
- 5 冷凝盖
- 6 冷凝器
- 7 調整腳

控制面板

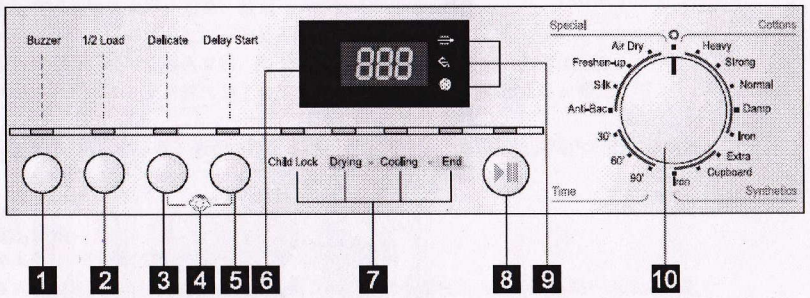

1 Buzzer (蜂鳴器按鈕)
2 1/2 Load(半量按鈕)
3 Delicate(精細按鈕)
4 Delay Start(預校開機時間掣)
5 Child Lock(安全童鎖)
7 Indicator Lights(指示燈)
6 Display(LED 顯示屏)
Child Lock(安全童鎖)
8 Start/Pause(開始/暫停)
Drying(乾衣)
9 Indicator lights(指示燈)
Cooling (吹風)
Condenser unit(冷凝器)
End(結束)
Water reservoir（儲水器）
10 Program selector dial(程序選擇旋鈕掣)
Fluff fliters（絨毛過濾）

使用

首次使用

●請按照安裝說明書連接電路
●請取出滾筒內的所有物品
●首次使用前我們建議您放一些濕布在滾筒內烘乾 30 分鐘；因新機裡可能會有一些灰塵；

日常使用

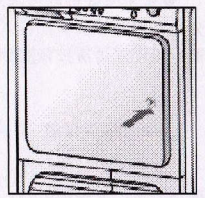

接通電源，打開機門（如右圖）

●將衣物置於桶內，一次一件，盡可能搖動均勻。
●關上門，檢查確保衣物沒有被卡在門和過濾網上

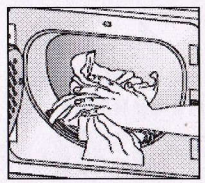

選擇您需要的程序

●將程序旋扭至所需的程序位置開始/暫停鍵開始閃爍，如果沒有按下任何鍵，10 分鐘後將自動關機。

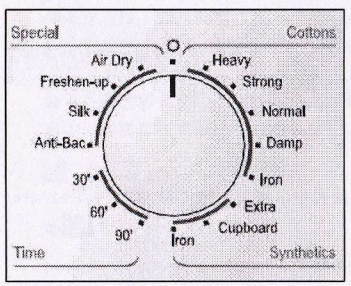

程式選擇旋鈕分為以下部分：
- 棉(Cottons)
- 合成物料(Synthetics)
- 時間(Time)
- 特殊衣物質料(Special)

自動控制乾衣

●根據衣物的類型，人工選擇需要的程序。啟動機器後機器能自動探測衣服的濕度，以調整烘乾的時間。此烘乾系統適用於棉，化纖和殺菌，絲綢程序。

時間控制乾衣

●如果需要可以用來完成幹衣過程。如果是棉選擇 90 或 60 分鐘的程式，人造材料 30 分鐘。如果想要中止程式，直接將程式選擇按鈕扭到“0”刻度。乾衣結束後，再拿出衣物前先將程式選擇按鈕調到“0”刻度。

程序選擇鍵

●根據選擇的程序，不同的功能能夠組合使用。但是必須在選擇了需要的程序後，和在按下開始，暫停鍵之前。當這些按鈕按下時相應的顯示燈會亮，再按一次就會熄滅。

選擇“蜂鳴器”

“蜂鳴器”按鍵在行程進行或停止時，都可以開啟或關閉。按鍵開啟蜂鳴器後，相應的燈會亮並發出鳴響一聲，一下操作蜂鳴器就會發出聲音：

按其他按鍵時

行程結束後發出結束旋律；

蜂鳴器開啟後，再按一下蜂鳴器鍵將會關閉蜂鳴器。

選擇“快速”鍵

在超强乾，强乾，標準程序中，可以開啟“快速”鍵，按“快速”鍵後，乾衣時間會縮短 3-5 分鐘，相應的燈會亮。此選項不能和“精細”鍵功能一起使用。

選擇“精細”鍵

在棉(Cotton)，合成物料(Synthetics)模式程式中，可以開啟“精細鍵”(Delicate)

鍵，按下精細鍵後，可以使乾衣機在低溫下乾燥細緻衣物，並且相應的燈會亮。此選項可配合時間控制程式下進行。但是不能和“快速乾衣”功能同時使用。

選擇“預設”鍵

“預設”鍵可以最多預設 24 小時啟動程式。此選項必須在選擇程式之後和在按下**“開始/暫停”**鍵開始程式之前進行。

●每按一次預約鍵增加 1 小時預約時間，預約時間 1~24 小時範圍內可選；

“取消預約 1--> 2 --> 3• • • • • • H 24”

當您按下“開始/暫停”鍵後，相應的指示燈會亮，倒數計時開始。

●在選擇行程和模式之前或者在選擇行程和模式之後，設置預約時間都可以；

“Display”（LED 燈）以小時為單位顯示剩餘時間。

LED 燈

LED 燈顯示以下資訊：

●當選擇程式時，顯示設定時間

選擇了程式後，顯示器會顯示持續時間（以小時和分鐘計）。根據不同類型的衣料和要求的乾衣程度，顯示器會自動計時。

程式開始後，**LED** 燈將顯示剩餘時間。

●顯示預約時間

如果你選擇了預設時間，LED 燈將顯示剩餘時間.

只要你按下”開始/暫停”鍵後，本機將開始運行所選程式. 如果你想查看已經選擇的程式，請再次按”開始/暫停”鍵，這將顯示先前所選程式的時間.

●不正確的程式選項時，將顯示錯誤碼

●如果您選擇了與程式不相容的選項，顯示器上會出現“Ers”字樣；

指示燈顯示

●

每完成一個程式，此燈顯示，提示使用者清潔冷凝器，如不清潔下次程式起動將正常運行，但多次不清潔會影響冷凝效率。

●

儲水器滿後，此燈顯示，提示使用者將儲水器中的水倒出。注：因儲水器的容量問題，最好使用者使用一次滿載烘乾後就清除一次儲水器中的水，以免下次使用時提示警報發出。

●

每完成一個程式，此燈顯示，提示使用者清潔過濾網，如不清潔，下次程式起動將正常運行，但多次不清潔會影響烘乾效率。

選擇“開始/暫停”鍵

選擇了程式和選項後，按此鍵啟動本機。如果在程式運行過程中乾衣機的門被打開了，在門關閉之後必須重新按此鍵，程式會從中斷處繼續運行。在這種情況下，“開始/暫停”鍵的指示燈會閃爍以提示您需按下啟動鍵。

指示燈功能如下：

●安全童鎖指示燈 Child Lock，該燈亮表示本機正處於鎖定狀態。
●乾衣指示燈 Drying，該燈亮表示本機正處於乾衣狀態。
●吹風指示燈 Cooling，該燈亮表示本機處在吹風狀態。在乾衣結束後，會有一個 5 或 10 分鐘的吹風階段。
●程式結束指示燈”End”。此燈在吹風結束後的防皺階段和程式結束。

程式結束時

所有的乾衣程式結束時都會有一個 5 或 10 分鐘的吹風階段。
如果吹風結束後衣物還沒拿出，乾衣機會進入防皺階段（持續時間：最長 30 分鐘）
防皺結束後，即使衣物還沒拿出，機器也會自動關機。
燈會熄滅，蜂鳴器響 15 秒。
程式旋鈕旋轉到“0”，所有指示燈會關掉。
童鎖工能如下：

每次使用後

本機每次使用後，請清潔過濾網。
重要提示：
如果在程式結束前就要中止，建議您將程式選擇按鈕轉動到晾乾按鍵”Air Dry”位置，直到冷卻階段結束後再將衣物移出。這樣可以避免在衣物在機內聚熱。首先將盤轉到“0”位置，然後轉到晾乾按鍵”Air Dry”，並按下開始鍵。

重新選擇程式
乾衣過程中，如果想重新選擇程式，先將程式旋鈕轉動到“0”位置。選擇新的程式並按下開始鍵，就可以了。

乾衣指南

乾衣事項

以下類型的衣物不允許置於乾衣機內：特殊精細衣物如網狀窗簾，羊毛織品，絲綢，有金屬飾品的人造材料，尼龍緊身衣，大型物件如戴帽風衣，毛毯，鴨絨被，羽絨被，睡袋和任何含有海綿橡膠或類似物質的衣物。

●遵循洗衣標籤上的烘乾指示

表示通常可用機器烘乾

表示常規烘乾（高溫）

表示輕柔烘乾（低溫）

表示不能機器烘乾

●扣上枕頭套和外套的鈕扣，以防止小物件縫繞道裏面。扣上鈕扣，拉鏈，領帶，圍裙帶，掉鉤。根據衣料和所需乾燥程度分開衣物。
●爲了防止衣物出現褶皺和節省能源，請不要過度烘乾。
●不要講深色衣物與淺色絨毛物件放在一起，如毛巾，因為其會細毛。
●滾動乾衣前要將衣物充分旋轉攪動。
●精細的衣物如襯衫等在乾衣前也應簡單的旋轉攪動。
●針織品（針織內衣）在乾衣過程中可能會有一點縮水，所以不要乾衣過度。建議在買這類衣物選尺碼時要考慮縮水的因素。
●硬的衣物也可以放進乾衣機。但要選擇“熨乾”程序才能達到硬挺的效果。清理任何硬殘渣的做法是：乾衣後用濕布清理滾筒內部，然後擦乾。
●乾衣結束後要防止靜電。可以在洗衣時加入柔順劑或者使用專門針對機器乾衣的軟化衣物裝置。
●乾衣機乾衣後請將衣物取出。
●如果個別衣物仍然潮濕，可以繼續乾衣但不要超過 30 分鐘。通常一些多層折疊的衣物如（領口,袖口）需要這步驟。
●衣物放入機內時要將面的金屬物件全部拿出來（如髮夾，安全針，別針等等）。
●在乾衣前請扣上所有鈕扣，帶子，長條物等。
●乾衣前，請去掉頑固污漬，用特殊的清潔劑專門擦污處。
●特殊處理窗簾：請不要把窗簾的釣鉤放入乾衣機內。

最大乾衣量

建議的乾衣量詳見程序表

一般規定

●純棉，亞麻：將內桶裝滿但不能太滿

●合成衣物：衣物量不能超過內桶的一般

●絲綢織物及羊毛：衣物量不能超過內桶四分之一

溫馨提示

●請盡可能裝最大的乾衣量。因為裝載小容量衣物進行烘乾，不經濟實惠。

●對於易褶皺的衣物，請稍減少乾衣量。

衣物重量

參考如下

浴衣	1600g
餐巾	130g
被套	930g
床單	665g
枕套	265g
桌布	330g
毛巾	265g
抹布	130g
睡袍	265g
女士內褲	130g
工作服	800g
男士襯衫	265g
男士睡衣褲	665g
背心	130g
男士內褲	130g

乾衣程序

程式	行程	最大負載量	描述
棉	Extra 超大	8kg	浴衣, 厚毛巾, 牛仔褲, 工作服
	Heavy 超強	8kg	浴衣, 厚毛巾, 牛仔褲, 工作服
	Normal 普通	8kg	襯衣, T 襯衣, 棉褲.
	Damp 濕潤	8kg	編織類, 棉襯衣
	Iron 熨幹	8kg	被單, 枕套, 餐布, 過漿的衣服
合成衣物	Extra 超大	4kg	床單, 桌面, 合纖類衣物
	Cupboard 平板乾燥	4kg	合纖類衣物
	Iron 熨乾	4kg	編織類, 襯衣
時間	30min, 60min, 90min	8kg	多層的絲織品，浴巾，抹布。
特別選項	Anti-Bac 殺菌	4kg	男性內衣, 幼兒服, 厚寒冬服
	Freshen-up 防皺	4kg	男性內衣, 襯衫
	Silk 絲綢	2kg	絲綢類
	Air-Dry 晾乾	2.5kg	男性內衣，襯衫，T 襯衫，棉褲子

保養和清潔

對本機進行任何的保養和清潔之前，請您一定要斷開電源。

機身清潔

只能使用肥皂盒水進行清潔，然後徹底擦乾。

重要提示：請勿使用酒精和稀釋液及類似的物品清潔機身外部。

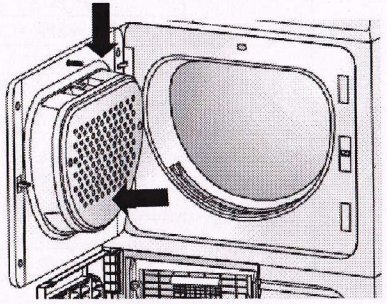

機門清潔

定期清潔機門內部，去除過濾網周圍門縫裡的絨毛。

過濾網清潔

定期清潔機門內部，去除過濾網周圍門縫裡的絨毛。

清潔過濾網

過濾網乾淨，乾衣機才能正常工作。

過濾網裡會把絨毛收集起來，以提高乾衣機乾衣效率，

“Filter”指示燈亮提醒您，需要進行清潔過濾網操作。

在清潔時，須將機門內的過濾網取出。

當乾衣時，所有的纖維衣物都會脫毛，本機會通過過濾網將這些絨毛收集起來。

當這種現象出現時，請用刷子蘸溫水洗滌過濾網。打開機門，取下過濾網。（如下圖所示）

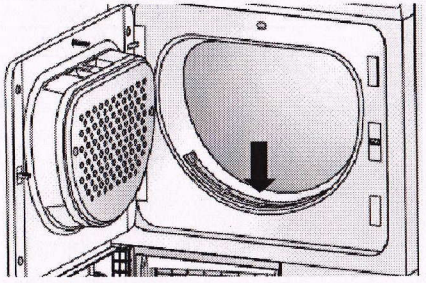

警告 沒有過濾網時，請不要使用本機。

清空儲水器

冷凝器的水收集到儲水器中。每次使用後清空儲水器。否則可能導致烘乾機性能降低。如果儲水器已滿，則在烘乾機運行過程中“排淨殘水 燈變亮並且蜂鳴器鳴叫。”在這種情況下，必須在一小時之內清空儲水器。

1. 拉出儲水器。

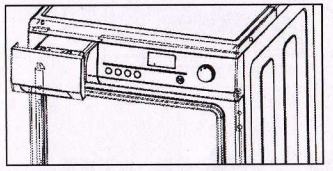

2. 將儲水器中的水倒入水池。

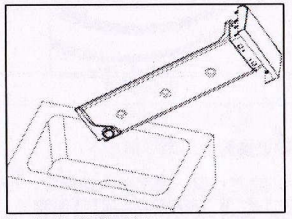

3. 重新將儲水器推入乾衣機。

4. 按 啟動/暫停 按鈕。

冷凝器

冷凝器是實現有效烘乾的一個非常重要的部件，因此需要特別注意。建議您每年將冷凝器清潔三次或四次。

打開冷凝器蓋子。

1.

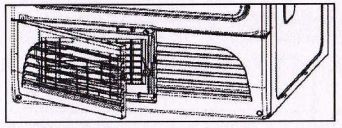

2. 轉動兩個鎖定杆，將冷凝器拉出。

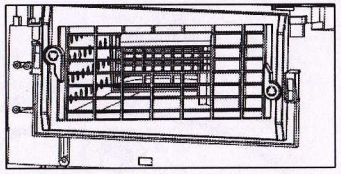

3. 將冷凝器放在水龍頭下使水完全流過以清潔冷凝器。

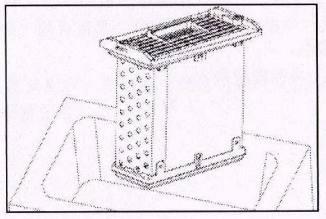

4. 按照相反方向安裝。

濕度感應器

在乾衣機運行過程中，此裝置用於感應衣物的濕度，這意味著必須始終對它進行清潔。清潔的主要原因是要去除感應器表面上堆積的氧化鈣水垢。擦拭轉筒內的感應器（如圖所示）

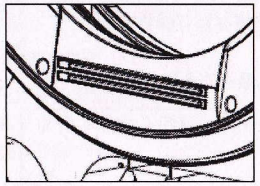

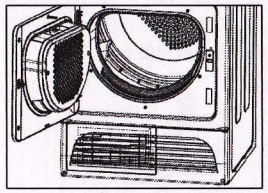

更換燈泡

1. 將門打開，將手伸入轉筒中，用螺絲刀旋下燈罩的兩個螺絲，取下燈罩。

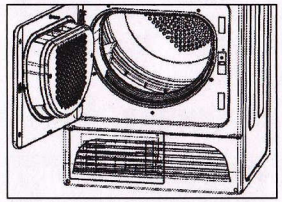

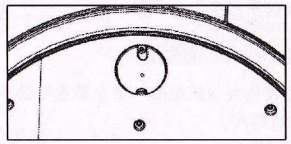

2. 逆時針旋轉燈泡將其取下。小心不要讓燈泡跌落。

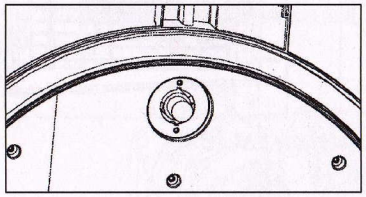

3. 按照與其相反方向的過程裝上新燈泡。
4. 用手抓住燈罩後用力逆時針轉動，直到燈泡鬆脫為止。

常見故障

●某些故障只是由於缺乏簡單的保養和檢查所致，不需要通過維修人員也可即時輕鬆解決。在您致電第一電業維修服務中心前，請仔細閱讀下文所列出的常見故障及解決辦法。

●使用機器的時候可能會出現**開始/暫停**鍵指示燈閃爍，此表示本機沒有正常工作。

●當問題解決了的時候，按下**開始/暫停**鍵以重啟程式。如果檢查了之後，問題依然存在，請聯繫我們在當地的客服中心。

故障	可能的原因	解決辦法
機器不工作。	• 插頭沒有通電 • 機門開著 • 您確定您按下了開始/暫停鍵 ⏯ 嗎？	• 將插頭插上插座； • 關閉機門 • 再次按下開始鍵 ⏯
乾衣效果不令人滿意。	• 程式選擇錯誤。 • 過濾網堵塞 • 乾衣量不正確 • 在濕度感應片有沉積物；	• 下次乾衣時選擇一個不同的程式（參見程式介紹部分） • 清洗乾淨過濾網 • 查看建議乾衣量 • 清洗濕度感應片表面
滾筒指示燈不亮。	• 燈泡有問題	• 換一個新燈泡
程式開始後，乾衣週期很快結束。結束燈亮。	• 乾衣量不足或者對所選程式而言，放入的衣服本身已經比較幹。	• 選擇更高的乾衣標準 例如：選擇 特乾 Extra 代替 強乾 Strong
程式執行時間過長。	• 乾衣量太大	減少乾衣量

如果您不能確定或解決問題，請聯繫我們的客服中心。打電話前，請您記下您的乾衣機型號、機身號碼以及購買日期，客服中心需要瞭解這些資訊。

重要提示：即使您的機器仍處在保修期內，但由於使用或安裝不正確引起的問題，此機將不被保用。

技術參數

乾衣機型號	CD-8C
最大烘乾容量(kg)	8.0
電源(AC V/Hz)	220-230/50Hz
烘乾發熱功率(W)	2500
淨重(kg)	40.5
機器尺寸(寬*深*高)(mm)	595*630*850

安裝

任何不遵循說明書或者試圖更改產品本身的行為都是危險的。

請務必不要講本機放在供電電線上

本機電路的安裝工作必須由合格或專業電工完成

重要提示：本機絕對不可以嵌入牆壁

拆包

使用本機前，必須拆除所有包裝。

附件

打開附件袋，清點袋中的附件

附件	附件名稱	數量
	排氣管	1
	用戶手冊	1

如果需要移動本機，請垂直搬運。

接地說明：

此設備必須正確接地。在出現故障或損壞情況下，接地可以給電流提供一個最小電阻，從而減少電擊的危險。

此電器有一個帶設備接地導線和插頭的電源線。插頭必須插入正確安裝並接地的電源插座（符合所有當地規程和標準）中。

補充接地步驟：

有些當地規定可能需要一個單獨的接地。在此情況下，您需要單獨購買附件接地線、固定夾各螺釘。

冷凝水排放：

此烘乾機排放冷凝水時無需排到儲水器。冷凝水被直接抽出烘乾機。

調平烘乾機

1. 調平烘乾機以避免出現雜訊和振動。

乾衣機必須安放在一個乾淨的地方，並確保此區域中沒有積水和結冰現象，而且沒有存放易燃物。本機應擺放在一個堅固而又平整的地方，這可以使本機在使用時產生的震動和噪音降至最低。

2. 如果烘乾機沒有完全平衡，根據需要向上或向下調節前面的調整腳，

順時針旋轉升高，逆時針旋轉降低，直到烘乾機不會前後左右擺動為止，一旦本機的位置固定下來，一定要在水平儀的幫助下檢查是否平衡，如不平衡需調至平衡為止。

對角檢查

當向下按烘乾機的邊緣時，機器在上下方向不能有任何晃動。（請檢查兩個方向）
如果按機器頂部固定架（對角）時有晃動，則重新調節調整腳。

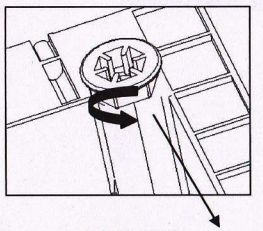

調節螺絲母

不要用深疊的毛毯或麻繩放在地板上，這可能會產生一些熱量，對機器的工作產生一些干擾。

重要提示：

本機工作產生的熱氣溫度可以達到 60℃，因此本機不能安裝在無法抗高溫的地面上。
本機的室內工作溫度須不低於 5℃且不超過 35℃，因為溫度會影響本機的工作效率。

可反轉門

為使您裝衣取衣更加方便，本機門採用可反轉設計。其安裝必須由專業人士完成。

電路連接

本機的任何電路安裝工作都必須由專業人士完成。

警告：本機必須接地。

如果您沒有採取上述安全措施，本代理不承擔任何責任。

乾衣前，請確保您所處的供電電壓與與本機銘牌上的電壓一致。

主電源線顏色代表以下含義：

- 黃綠色表示地線；
- 藍色是中性線；
- 棕色是火線。

綠線和黃線必須和終端相連，以字母E或者地線標誌 ⏚ 表示。

警告：

將一個斷路插頭插到插座上會帶來安全危險。

務必正確處置斷路插頭。

永久連接

永久連接時，您必須在本機和供電電源之間安裝一個雙孔開關。

在開關任何時候都不要斷開黃色和綠色的地線。

包裝材料

- 如材料上帶有 ♺ 標誌表明可以再循環利用。

>PE<=聚乙烯
>PS<=聚苯乙烯
>PP<=聚丙烯

這些物質構成的材料可再循環利用，您只需將它們扔到適當的垃圾箱中即可。

舊機器

請將您的舊機器放置在指定的回收處理站，以保持環境整潔。

- 如產品或包裝上有 標誌，表明該產品不能作為家電廢品處理，而應該將它們交到恰當的電子電器裝置處理站。正確的處理廢舊電器，從而阻止了潛在的負面影響，保護了環境和人類健康，否則這些廢舊電器可能會造成一些浪費。

生態信息

爲了節約能源和保護環境，我們建議您遵從一下提示

- 儘量使本機工作時的負荷量大些，因為小負荷量工作不經濟。
- 以避免弄皺您的衣服和爲了節約能源，請不要烘乾已經乾燥的衣服。
- 請根據衣物的乾燥程度和衣物的類型選擇乾衣程序。
- 定期清理過濾網，以避免增肌乾燥次數和廢電。
- 保持房間通風，室內溫度不要超過35℃.

標準保修條件

如果您購買的產品在 12 個月內，有任何問題，請聯絡第一電業維修服務中心，但必須根據下列的條件：

- 機器安裝正確，並且按照銘牌上的標示的供電電壓使用。
- 本機只適用於普通家庭，並且是按照這安裝說明書正確使用。
- 本機沒有被非本公司授權的人員進行過保養，修理，拆卸等行為。

例外事項

本保修條款不包括以下內容：

- 由於運輸或使用不當，更換燈泡以及清除玻璃，塑料凳造成的損害。
- 將本機用於商業環境以及出租
- 產品沒有貼新朗商標

電路原理圖

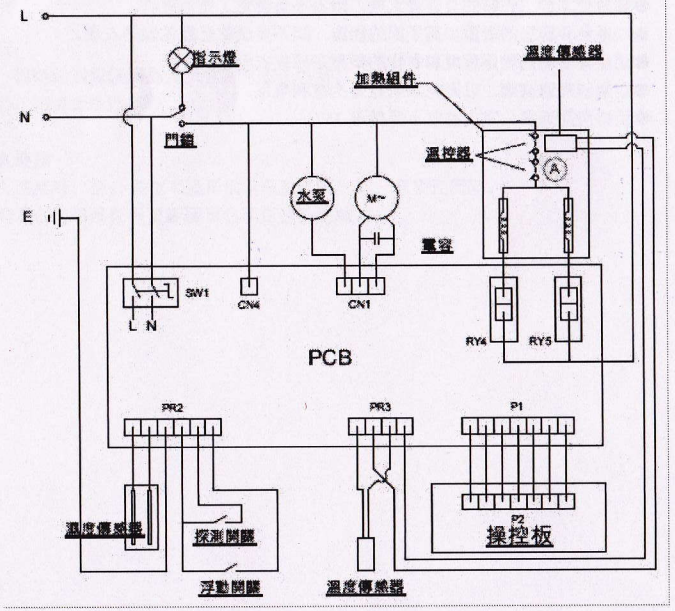

第一電業有限公司
香港皇后大道東 43 至 59 號東美中心 15 樓
網址：http://www.alpha-general.com